


OPERATION INSTRUCTIONS

Exterior Assembly Overview

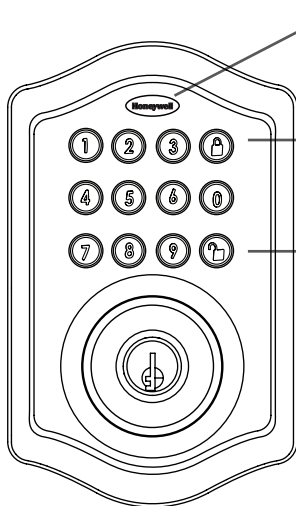

Indicator light

Green

- Indicates Successful Programming Step
- Indicates Unlocking is Successful

Red

- Indicates Failed Programming Step
- Indicates Locking is Successful



Lock button

Lock - Used to lock door

Clear - Used to clear wrong keypad entries



Unlock button

Unlock - Used to unlock door

Programming - Used in programming steps

Batteries (not included)

Electronic lock requires (4) High Quality AA Alkaline batteries. When all 4 batteries are installed in the correct position, hear 2 beeps and the keypad will illuminate blue. **DO NOT TOUCH** the keypad until the keypad stops illuminating.

Programming Symbols



Lock / Clear



Unlock / Programming



Programming Code



User Code (4-8 digits)



User ID (01-50, 2 digits)

Factory Settings

The lock comes factory preset with a:



Programming code - 123456





User code - 1234



User ID - 01



Please change the Programming

Code  and the User Code 
as soon as possible after installation
to insure security.

Programming Tips

5 Seconds - Complete all the programming steps in the programming mode within 5 seconds.

Clear - Use the  key to clear entries in case a wrong button is pushed.

Locking and Unlocking

TO UNLOCK THE LOCK

Using Keypad: Enter a valid User Code (default code is 1234) and press and hear 1 beep and lights green.

TO LOCK THE LOCK

Using Keypad: Press and then hear 2 beeps and lights red.

Changing Programming Code

CHANGE CURRENT OR PRESET PROGRAMING CODE

Factory default Programming Code = 123456, this is the master password for your lock. All programming functions require this code. Follow the below sequence to change the Programming Code to your custom 6 digit combination.

→ → 4 → → new → → Re-enter →

Hear 1 beep and Light Indicator illuminates green

Record New and Changed Codes on Programming Record located on Page 17

Adding User Codes

TO ADD A NEW USER CODE (you can add up to 50 new user codes)

The User Code must be a 4-8 digit combination. Each User Code is then linked to a User ID (which is any number between 01-50) to identify an individual User Code . (User ID 1-9 should be entered as 01-09 so they are 2 digits).

For example: to add the User ID - 08 to User Code - 5678, enter the following:

→ → 1 → → → → → → Re-enter →
123456 08 5678 5678

Hear 1 beep and Light Indicator illuminates green

NOTE: When a NEW USER CODE is set, the default factory code (1234) is deleted for safety.

Record New and Changed Codes on Programming Record located on Page 17

Deleting User Codes

DELETE ONE EXISTING OR PRESET USER CODE

The unit comes with a factory User ID **ID** = 01 for User Code **UC** = 1234.

IMPORTANT: To delete 1 User Code **UC**, the lock must have more than 1 User Code **UC** in its database.

PC →  → 2 →  → Existing **ID** →  re-enter **ID** → 

Hear 1 beep and Light Indicator illuminates green

DELETE ALL USER CODES

IMPORTANT: this will delete the user codes but not the programming code, enter the following




PC →  → 3 →  → re-enter **PC** → 

Hear 1 beep and Light Indicator illuminates green

Automatic Lock Function

SET OR CANCEL AUTO LOCK

You can set the lock to automatically close after each time the lock is opened. Time value range = 20 - 900 seconds, enter the following:

Set Auto Lock: **PC** →  → 5 →  → Time Value → 

Hear 1 beep and Light Indicator illuminates green

To cancel Auto Lock set the time to 00, enter the following:

Cancel Time Value Auto Lock: **PC** →  → 5 →  → 00 → 

Hear 1 beep and Light Indicator illuminates green

Sound On and Off

You can “mute” or turn the “sound on” on your lock by entering the following. (Factory setting is sound on).

PC →  → 6 →  → 1 or 2 → 

1 = Sound Off
2 = Sound On

Sound Off (1) - Light Indicator illuminates green

Sound On (2) - Hear 1 beep and Light Indicator illuminates green